


CENTRI PRECLEANER KIT FOR S 250 AND 300 SERIES BOBCAT

Part # 80-3002

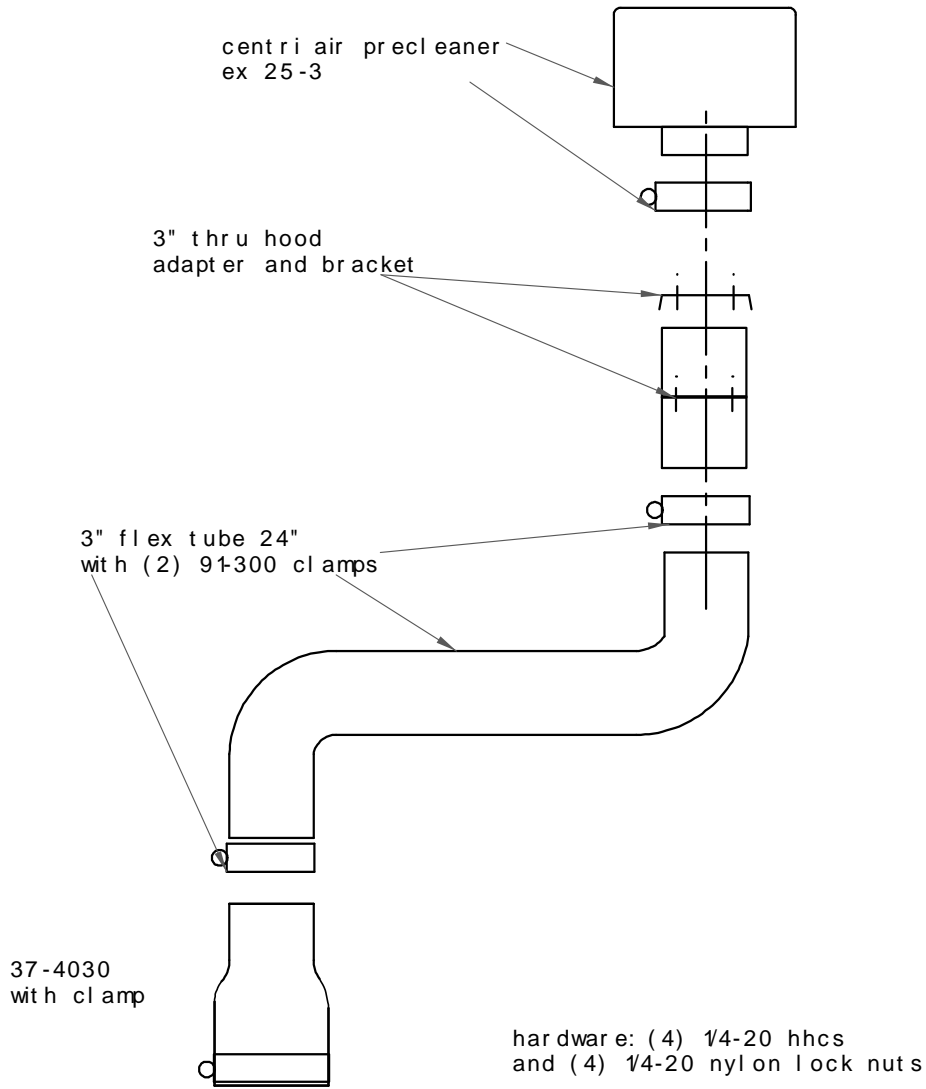

- Remove 4/3" reducer from filter inlet and replace with metal reducer (37-4030)**
- Attach 3" flex hose with clamp (91-300) supplied and run thru existing 4" cutout**
- Cut opening in 1st 3" channel (directly in front of exhaust) to accept 3" adapter assembly. Weld or attach using hardware supplied.**
- Attach 3" flex hose to bottom bracket assembly using clamp supplied (91-300)**
- Mount pre cleaner to top bracket assembly using clamp supplied**